

Compressor Replacement Kit for RoadLazer Line Striping Systems


3A2025A EN

Kit 112796




Instructions

1. Remove compressor pulley shield.

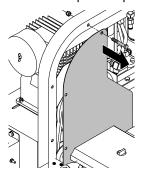


ti17859a

 2. Remove b-groove style v-belt. Leave belt if a-groove style belt is installed and skip to step 4.





ti17857a

3. Loosen pump and shield by engine and install new v-belt around engine pulley. Reinstall pump and shield.

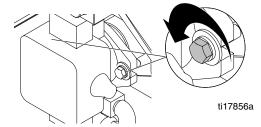


 Remove old compressor from unit and remove unloader assembly.

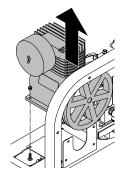

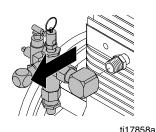

 5. Place new compressor with attached adapter plate in place and place v-belt around pulley.




ti17854a

Apply thread sealant to bolts and install bolts, lock washers and flat washers into adapter plate. Adjust belt until
proper tension is achieved. Tighten bolts to securely
attach adapter plate to frame.




ti17853a

- For 3 pump models: Loosen hose on pump closest to compressor and clock it 90° down so it does not interfere with unloader.
- Attach unloader to compressor using straight fitting and clock outlet/muffler at a 45° angle over the top of the compressor.

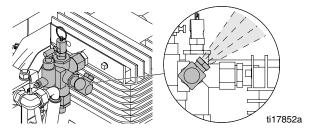

Reinstall shield.

 

ti17855a

NOTE: The compressor has no oil in it. Fill the compressor with the supplied oil or any high grade synthetic compressor oil only to the top of the sight glass.

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 3A2025

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea